

HERZ-Regulating valve 4001

Flow rate controller

Data sheet 4001, Issue 1011



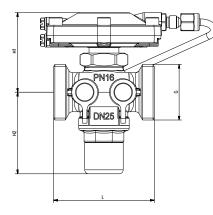

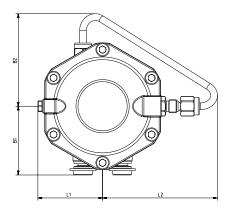

| | DN | G | L | H1 | H2 | B1 | B2 | L1 | L2 |
|-----------|----|---|-----|----|------|----|------|----|----|
| 1 4001 21 | 15 | 3/4 G | 66 | 59 | 61,5 | 49 | 63 | 48 | 81 |
| 1 4001 22 | 20 | 1 G | 76 | 60 | 61,5 | 51 | 68,5 | 48 | 85 |
| 1 4001 23 | 25 | 1 1/4 flatsealing | 76 | 60 | 61,5 | 51 | 68,5 | 48 | 85 |
| 1 4001 24 | 32 | 1½ flatsealing | 114 | 76 | 79 | 76 | 47 | 57 | 89 |
| 1 4001 25 | 40 | 1¾ flatsealing | 132 | 86 | 90 | 75 | 47 | 70 | 81 |
| 1 4001 26 | 50 | 2 ³ / ₈ flatsealing | 140 | 86 | 90 | 75 | 47 | 70 | 81 |

🖾 Technical data

max. operating pressure max. differencial pressure on the body min. operating temperature min. operating temperature max. operating temperature 16 bar 4 bar 2 °C (pure water) - 20 °C (frost protection) up to DN 32 130 °C from DN 40 110 °C

Application

The Pressure Independent Balancing Valve (PIBV) is used in all heating and cooling systems with circulation pumps. The valve automatically maintains flow to the required part of the system at the set rate by measuring and immediately adjusting to any variation in pressure. No additional measurements are necessary and the correct flow rate is achieved at all operating conditions. The diaphragm responds to the pressure upstream and downstream of the regulating valve (via an internal impulse line). The valve settings directly affect the volumetric flow through the valve. It is thus possible to set the maximum flow rate based on the flow chart when the valve is fitted. This allows for the balancing of heating circuits, cooling water systems, ceiling cooling and heating panels, air heaters, etc. without any need to first assess the pressure variations in the system. In addition to the PIBV, HERZ Ball Valves (2190) can be fitted in the corresponding flow pipe. If control measurements of the flow rate are required, then STRÖMAX-M valves (4017 M, 4117 M, 4217 GM) must be fitted instead.

🖾 Materials

Body:dezincification-resistant brassMembranes and O-rings:EPDMWater purity in accordance with the ÖNORM H 5195 and VDI 2035 standardsEthylene and propylene glycol can be mixed to a ratio of 15 - 45 vol. [%].




🖸 Installation

The PIBV is fitted in the return in any orientation. The arrow on the valve body should align with the direction of flow.

It is recommended that an isolation valve is fitted both upstream and downstream of the PIBV.

The PIBV may be isolated using the HERZ pre-setting key (1 4006 02).

For pre-setting, turn the key right (clockwise) up to the stop. The setting should then read < 0%.

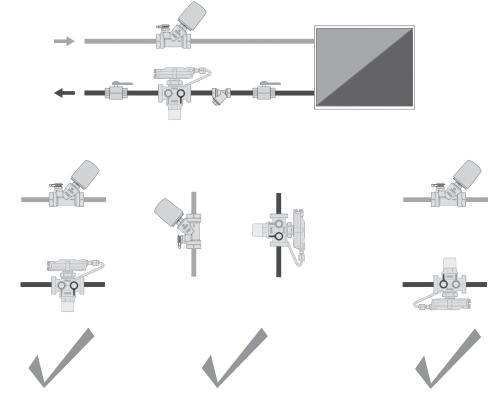

🖾 kvs-values

| DN 15 | 0,4 m³/h | DN 32 | 2,5 m³/h |
|-------|----------|-------|----------|
| DN 20 | 0,9 m³/h | DN 40 | 5 m³/h |
| DN 25 | 1,9 m³/h | DN 50 | 5 m³/h |

Accessories and spare parts

| 7217 | HERZ-Motorised balancing valve, angle version |
|------|---|
|------|---|

- 4117 HERZ-STRÖMAX circuit control valves, angle version
- 4217 HERZ-STRÖMAX circuit control valves, straight version
- 4017 HERZ-STRÖMAX circuit control valves with integrated metering orifice plate
- 4125 HERZ shut-off valves, angle version
- 4115 HERZ shut-off valves, angle version
- 4215 HERZ shut-off valves, straight version, also variants with male threads. For details please refer to the corresponding data sheets.
- 1 0284 01 test point for HERZ circuit control valve, blue cap (return)
- 1 0284 02 test point for HERZ circuit control valve, red cap (flow)
- 1 0284 11 test point for HERZ circuit control valve, extended model, blue cap (return)
- 1 0284 12 test point for HERZ circuit control valve, extended model, red cap (flow)
- 1 0284 21 HERZ test point with draining function, blue cap (return)
- 1 0284 22 HERZ test point with draining function, red cap (flow)
- 1 0284 00 test point adapter set
- 1 7709 .. HERZ actuating drive for two-point or pulse control
- 1 7990 .. HERZ actuating drive for continuous control
- 1 0273 09 screw plug 1/4
- 1 4006 02 HERZ pre-setting key for flow rate controller

Pipe connections (with cone seal) for metal pipes

| Pipe | | 8 | 10 | 12 | 14 | 15 | 16 | 18 | 22 |
|------------|--------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Valve | | DN 15 | DN 20 |
| Nut G | | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 1 |
| Connection | with metallic seal | 1 6274 18 | 1 6274 00 | 1 6274 01 | 1 6274 02 | 1 6274 03 | 1 6274 04 | - | 1 6273 01 |
| Connection | with soft seal | - | - | 1 6276 12 | 1 6276 14 | 1 6276 15 | 1 6276 16 | 1 6276 18 | - |

Compression union for calibrated soft steel and copper pipes (for details please refer to the corresponding data sheets)

Pipe connections (with cone seal) for plastic pipes

| Pipe | 10 x 1,3 | 14 x 2 | 15 x 2,5 | 16 x 2 | 16 x 2,2 | 17 x 2 | 17 x 2,5 | 18 x 2,5 | 18 x 2 |
|------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Valve | DN 15 |
| Nut G | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | - | 1 |
| Connection | 1 6098 18 | 1 6098 02 | 1 6098 16 | 1 6098 03 | 1 6098 12 | 1 6098 04 | 1 6098 05 | 1 6098 06 | 1 6098 07 |

| Pipe | 20 x 2 | 20 x 3,5 | 20 x 2,5 | 25 x 3,5 | 26 x 3 |
|------------|-----------|-----------|-----------|-----------|-----------|
| Valve | DN 15 |
| Nut G | 3/4 | 3/4 | 3/4 | 1 | 1 |
| Connection | 1 6098 08 | 1 6098 10 | 1 6098 11 | 1 6198 00 | 1 6198 01 |
| Valve | DN 15 | | | | |
| Nut G | 1 | | | | |
| Connection | 1 6198 12 | | | | |

Plastic pipe connections for PE-X, PB and aluminium composite pipes (for details please refer to the corresponding data sheets)


When installing soft steel or copper pipes with a pipe wall of 1 mm or less with compression unions, we recommend the use of support sleeves (order no.: 1 0674 xx). When installing plastic pipes, suitable calibration tools are needed. Please refer to our instruction manual. For proper installation use silicone oil to lubricate the thread of the locking nut or olive screw as well as the olive.

Connection elements


- 1 6220 .. Iron pipe connection, consisting of nut, seal and pipe nipple with male pipe thread
- 1 6236 .. Soldering connection, consisting of nut, seal and soldering nipple
- 1 6240 .. Welding connection, consisting of nut, seal and welding nipple
- 1 6210 .. Iron pipe connection consisting of nut, seal and pipe nipple with male pipe thread
- 1 6235 .. Soldering connection, consisting of nut, seal and soldering nipple



HERZ-Connection elements

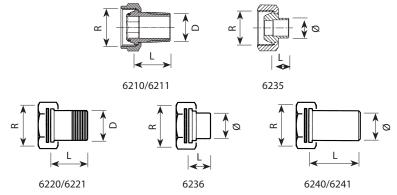

| | | , | | | |
|-----------------|--------------|-------|------|----|----|
| Valve dimension | Order number | R | D | ø | L |
| DN 15 | 1 6210 21 | 3/4 | 1/2 | - | 25 |
| DN 15 | 1 6210 26 | 3/4 | 1/2 | - | 21 |
| DN 15 | 1 6210 11 | 3/4 | 1/2 | - | 30 |
| DN 15 | 1 6211 00 | 3/4 | 3/8 | - | 24 |
| DN 20 | 1 6210 02 | 1 | 3/4 | - | 30 |
| DN 20 | 1 6210 12 | 1 | 1/2 | - | 30 |
| DN 25 | 1 6220 63 | 11⁄4 | 1 | - | 35 |
| DN 32 | 1 6220 64 | 1½ | 1 | - | 40 |
| DN 40 | 1 6220 65 | 1¾ | 11/2 | - | 49 |
| DN 50 | 1 6220 66 | 23⁄/8 | 2 | - | 56 |
| DN 15 | 1 6235 21 | 3/4 | - | 12 | 13 |
| DN 15 | 1 6235 31 | 3/4 | - | 15 | 13 |
| DN 15 | 1 6235 41 | 3/4 | - | 18 | 18 |
| DN 20 | 1 6235 12 | 1 | - | 18 | 18 |
| DN 25 | 1 6236 63 | 11⁄4 | - | 28 | 24 |
| DN 32 | 1 6236 64 | 1½ | - | 35 | 27 |
| DN 40 | 1 6236 65 | 1¾ | - | 42 | 31 |
| DN 50 | 1 6236 66 | 23⁄8 | - | 54 | 37 |
| DN 25 | 1 6240 63 | 1¼ | - | 34 | 51 |
| DN 32 | 1 6240 64 | 11/2 | - | 42 | 54 |
| DN 40 | 1 6240 65 | 1¾ | - | 48 | 57 |
| DN 50 | 1 6240 66 | 23⁄8 | _ | 60 | 60 |

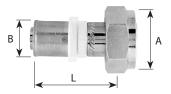

| Valve dimension | Order number | A | В | L |
|-----------------|--------------|-------|----------|----|
| DN 15 | P 7014 81 | G 3/4 | 14 x 2 | 50 |
| DN 15 | P 7016 81 | G 3/4 | 16 x 2 | 50 |
| DN 15 | P 7018 81 | G 3/4 | 18 x 2 | 50 |
| DN 15 | P 7020 81 | G 3/4 | 20 x 2 | 50 |
| DN 25 | P 7026 43 | G 1¼ | 26 x 3 | 50 |
| DN 25 | P 7032 43 | G 1¼ | 32 x 3 | 50 |
| DN 25 | P 7040 43 | G 1¼ | 40 x 3,5 | 70 |
| DN 32 | P 7032 44 | G 1½ | 32 x 3 | 50 |
| DN 32 | P 7040 44 | G 1½ | 40 x 3,5 | 70 |
| DN 32 | P 7050 44 | G 1½ | 50 x 4 | 70 |



💟 Tips

The valves must be installed for the correct application using clean fittings. A HERZ strainer (4111) should be fitted to prevent impurities.

🖸 Test points

Two test points are fitted on the same side of the valve and factory sealed. Thanks to this arrangement they are easily accessible and measurement devices can be quickly fitted, no matter in what position the valve has been installed.

PIBV can be isolated at any time or adjusted to the required flow rate.


The valve setting is clearly shown in percent. The preset value can be easily adjusted. The preset


🖾 Pre-setting



Application examples


Two-point control

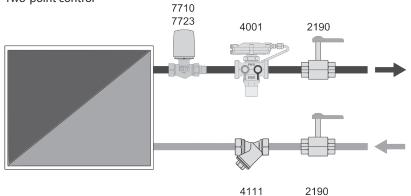

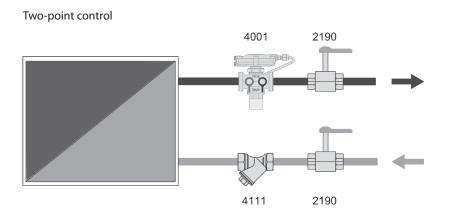





Two-point control

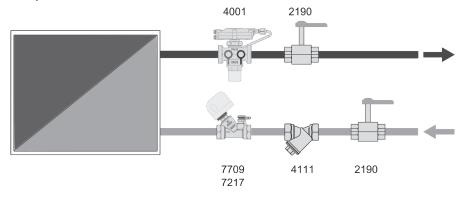


Two-point control

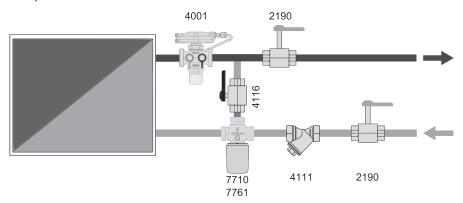


Please note: all diagrams are indicative in nature and do not claim to be complete.

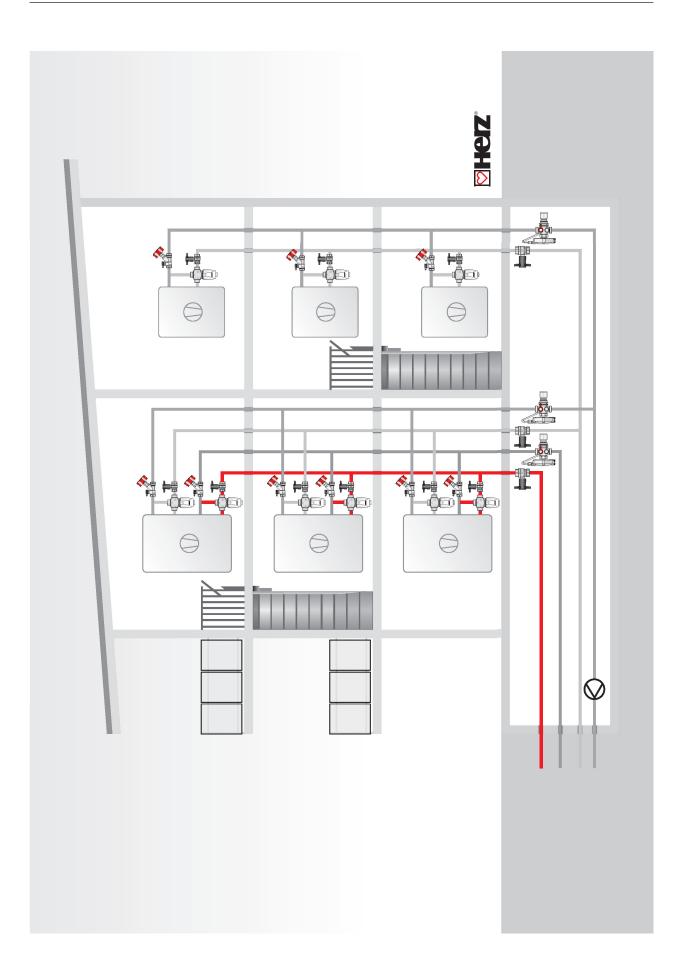




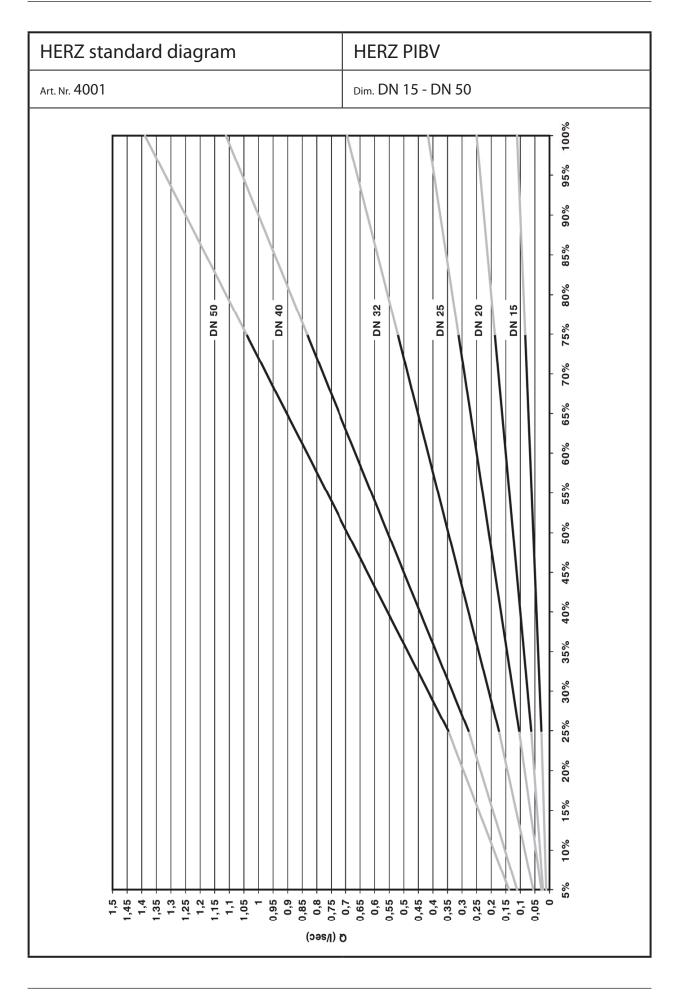





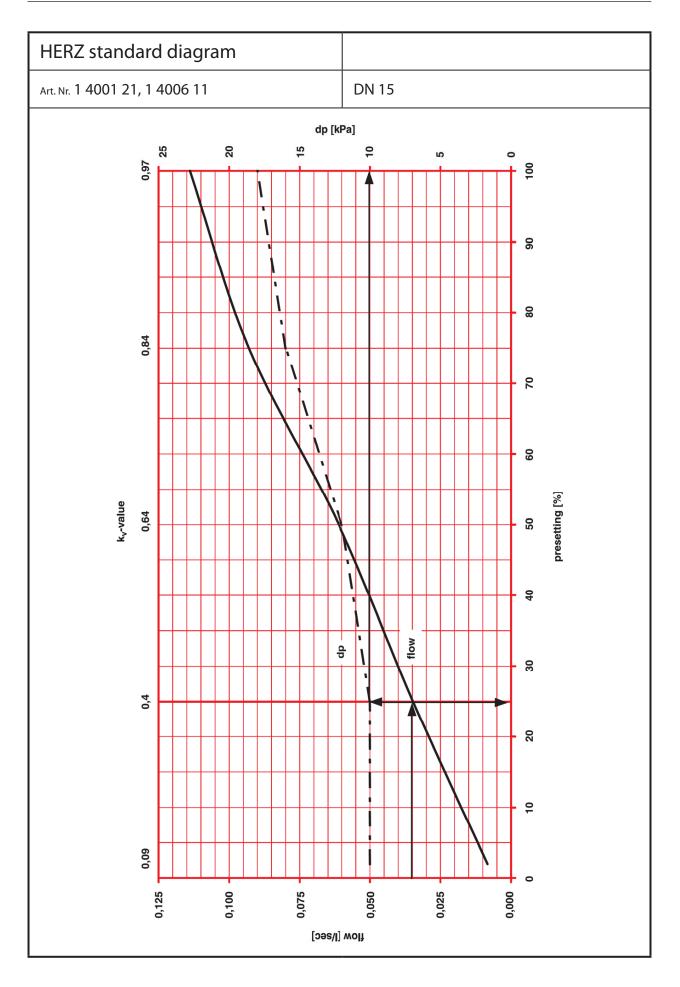


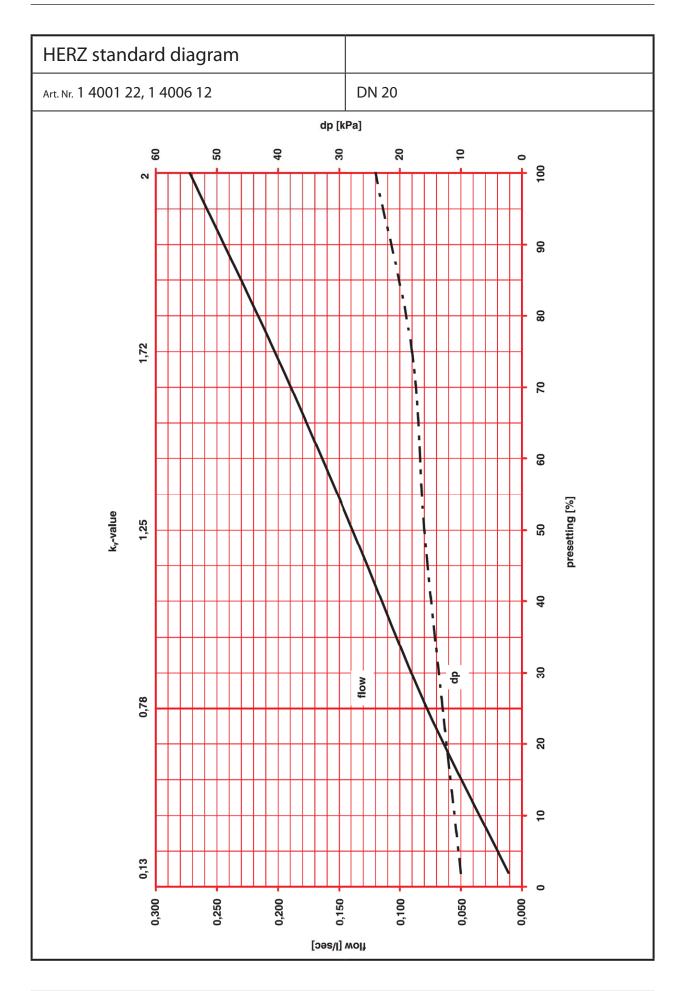

HERZ standard diagram

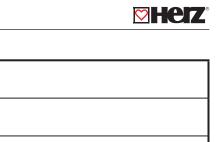

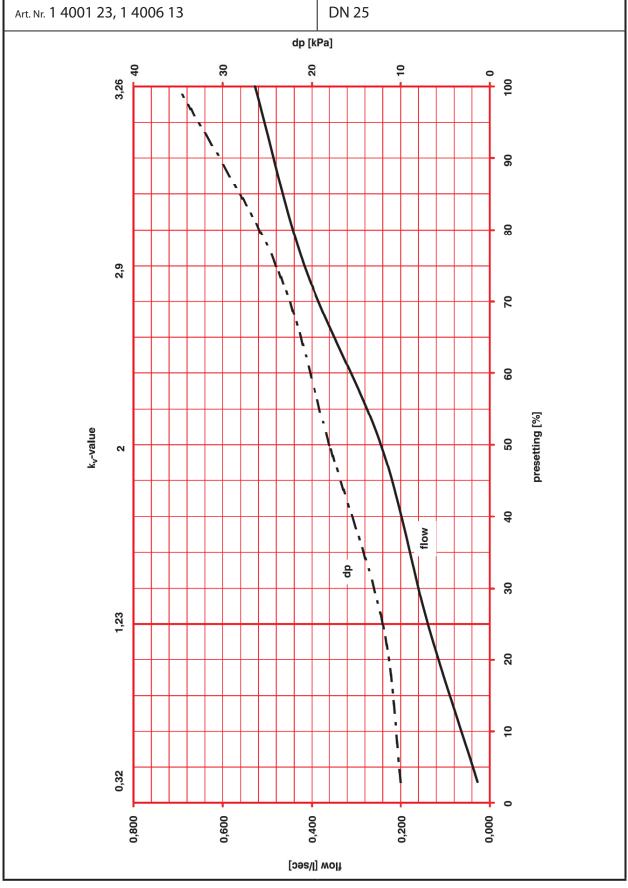

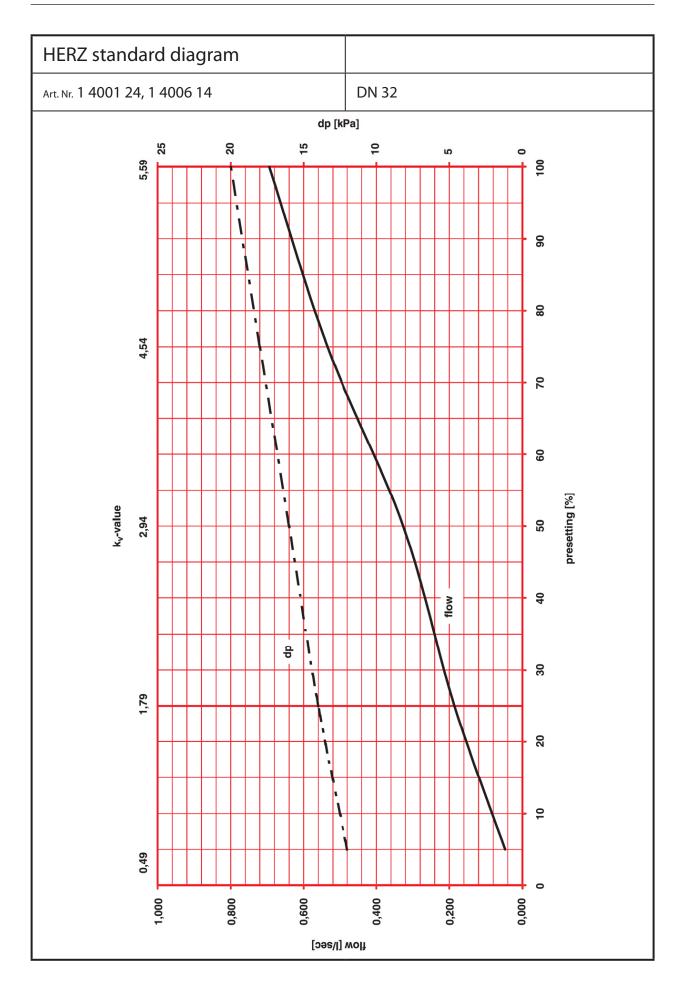

HERZ standard diagram Art. Nr. 1 4001 25, 1 4006 15 DN 40 dp [kPa] 25 15 30 20 10 2 0 100 7,7 06 ۱ 80 . 6,46 ١ 20 ١ ١ ١ 60 ١ presetting [%] . flow k_v-value 5,19 ۱ 50 dp ١ 1 ١ 1 40 I . 1 30 ۱ 3,25 ١ ۱ 20 ١ 10 ١ 0,92 0 0,800 0,600 0,000 1,200 1,000 0,400 0,200

[ow [l/sec]



